 




654321

MAIN SCREEN


 ON-SCREEN KEYBOARD
(times out)

KEY	
	MENU or SELECT for invoking special functions and to enter the menu system
	ESCAPE button or LED ON/OFF
	Down/Up navigation button Up/Down to change number values
	Left/Right to select digits to change



Press Menu 3X until SETUP appears	
+	Int, Ext, ON (to SET) ON = Lamp for ON Off. Reset Setup to Int or Ext to exit lamp mode, then to set, then to return to Setup Mode
	Brightness three levels: Low, High, Med dial or up/down to define choice, to set, to return to main settings
	Width/Clarity flash pulse width can be set in DEG (Degree of Rotation Adjustment), PCT (Percent of Duty Cycle Adjustment), or TIME (Time Pulse Duration Adjustment) dial or up/down and to change values, then to set, then to exit
	Mode of Operation options are INT (Internal), EXT (External), ON (On) dial or up/down to display desired value, then to set, then to exit
	Jog/Delay (Mode dependent - INT = JOG, EXT = DELAY) options are NONE , PHASE , TIME dial or up/down to change modes dial or up/down and to change values, then to set, to exit input number input number VRPM (EXT mode only) Virtual RPM, dial or up/down and to change values, then to set, to exit
	Memory (Internal Mode only) to toggle between RM (Recall Memory) and SM (Save Memory) for RM , use up/down to choose one of ten memory locations (RM1, RM2...RM10), then to set for SM , use to enter, use up/down to choose one of ten memory locations (SM1...SM10), to set to exit
MISC	Subset of Miscellaneous option settings
	to return to MISC Mode, then to return to main screen
	Decimal Point options are NONE , 1 , 2 , 3 dial or up/down to define choice, then to set, to return to setup DECPT *
	Scale (External Mode ONLY) display shows current setting for scale and units; use touchscreen keypad to enter desired scale value, press Enter button on touchscreen; use dial or up/down to choose one of the default engineering units, to set, to return to setup SCALE *
	Standby dial or up/down to define choice, Enabled (Enb), Disabled (dl 5), to set, to return to setup STDBY *
	Duty Cycle dial or up/down to define choice, Deg (Degrees) or Pct (Percent), to set, to return to setup DUTY *
	Prescale (External Mode ONLY) dial or up/down and to change values, then to set, to return to setup PRESCL *
	Engineering Units options are RPS , RPM , FPS , FPM dial or up/down to define choice, then to set, to return to setup UNITS *
	Input Pulse Active Edge options are Pos (positive leading edge) and neg (negative going edge) dial or up/down to choose option, then to set, to return to setup INPUT *
	Output Pulse Polarity options are Pos (positive leading edge), neg (negative going edge), and Se (factory use only) dial or up/down to choose option, then to set, to return to setup OUTP *
	Backlight dial or up/down for ON or OFF, then to set, to return to Setup BKLIT *